



# GTRF REFRIGERATED

## TOWER SERIES

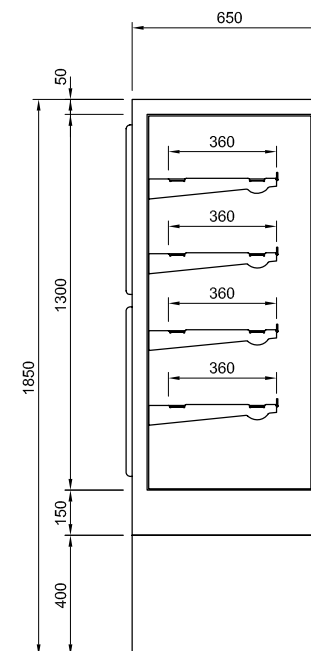


Solid glass front and sliding rear doors  
 Deck forced refrigeration  
 Double glazed glass  
 Four adjustable shelves  
 Ticket strips on shelves and deck  
 Vertical and canopy lights  
 Integral condenser  
 Plinth, castors and skirt  
 Available in two lengths  
 Free standing ticket strip for base  
 Condensate waste container supplied

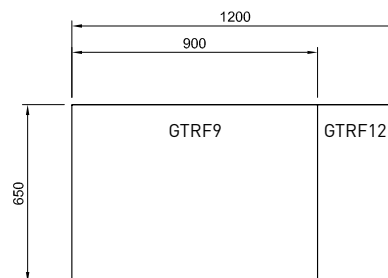


# GTRF REFRIGERATED

# TOWER SERIES

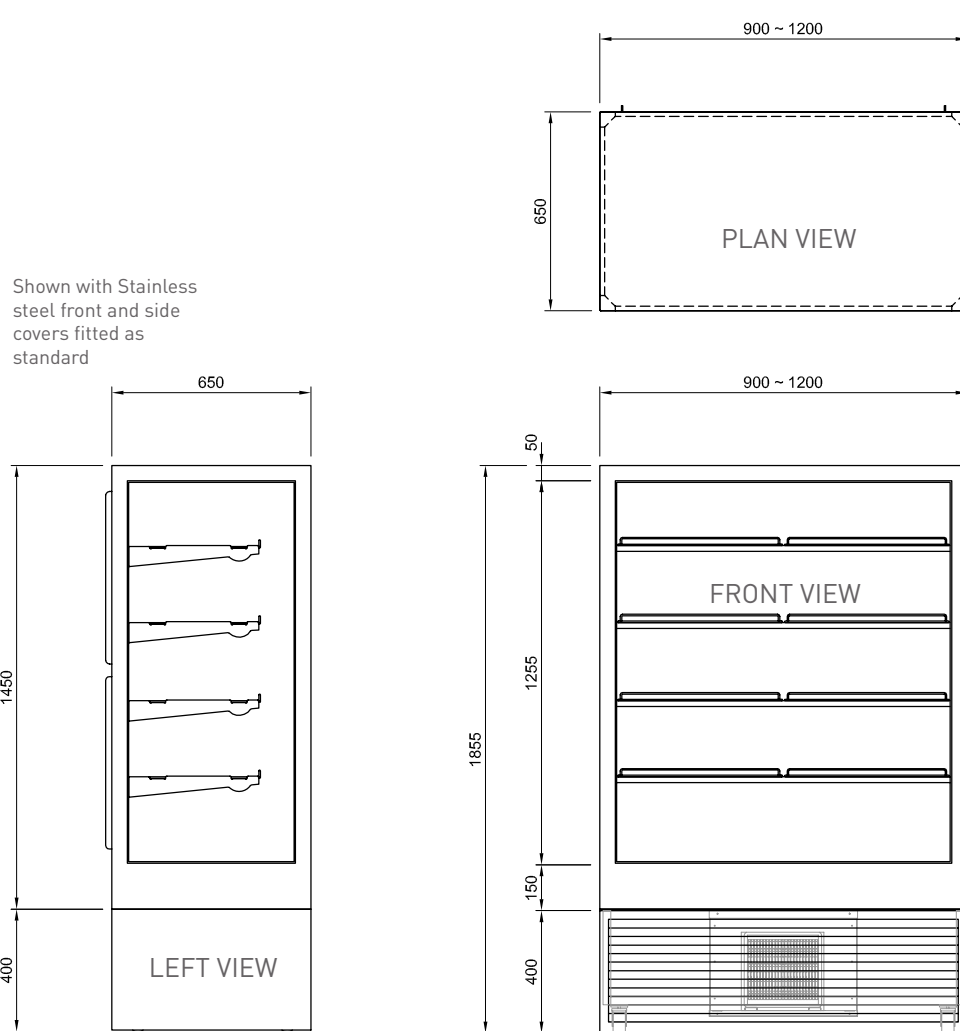


**Stand Alone Refrigerated Unit With Covers**

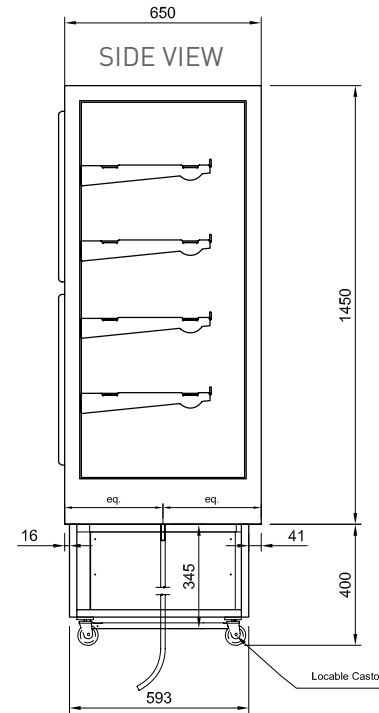

### CONDENSATE DRAINAGE

- Drain pipe position as shown
- 55 mm Stainless steel spigot to plastic flexible waste pipe 15mm dia. 1000 mm length
- Maximum ambient operating conditions  
25°C / 60% Relative Humidity

**Stand Alone Sub Frame Only**

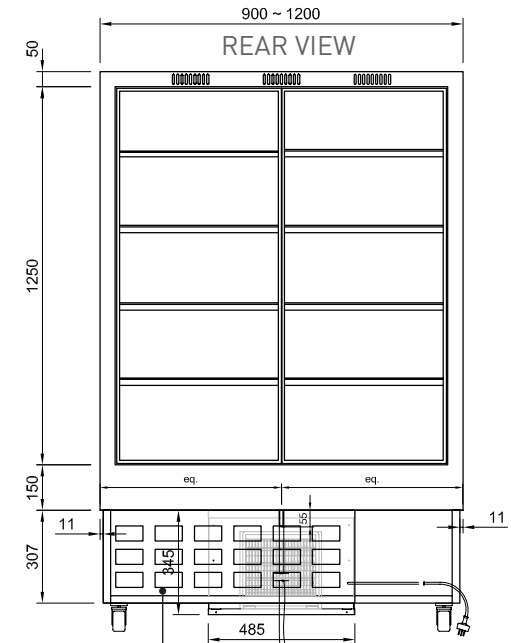

Removable rear Zintec cover.  
Drain pipe area left open.


### ELECTRICAL POWER

Electrical power cord 1500mm  
All units 3 pin 10 amp 1 phase  
- plug can be removed and unit  
hard wired on site

**Clean condenser face at two weekly intervals**


# GTRF BTRF D4RF

## REFRIGERATED UNITS DRAINAGE SERVICES OPTIONS

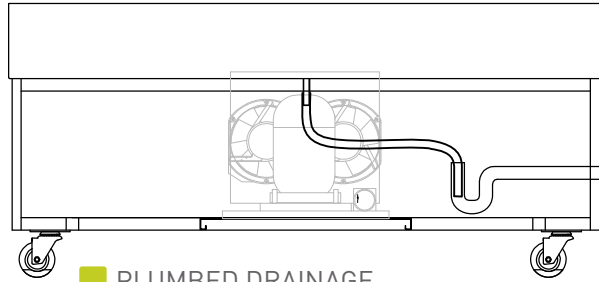


### ■ PLUMBED DRAINAGE

- Drainage to building waste
- Building waste by client

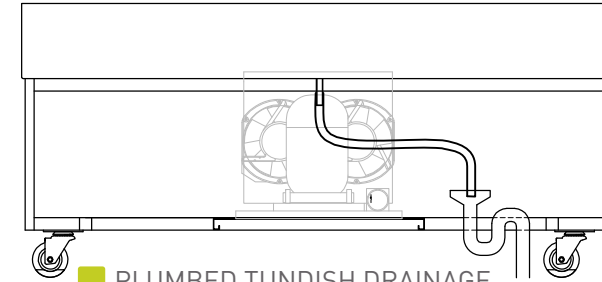


### ■ PLUMBED TUNDISH DRAINAGE

- Maximum 150 mm above finished floor level
- Drainage to building waste
- Building waste by client

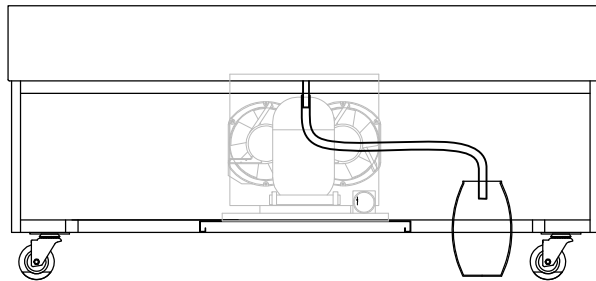

### ■ FREE STANDING RECIPIENT

- Supplied with all chilled units in range
- Receptacle placed under unit to receive condensate waste
- Dispose of waste water daily

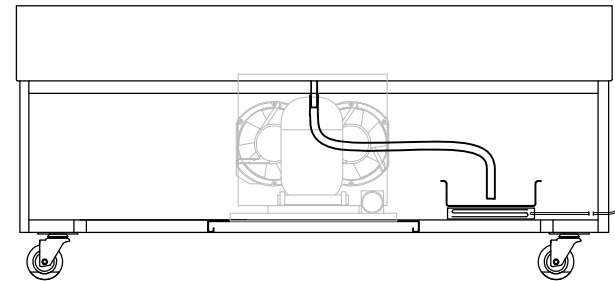

### ■ ELECTRICAL EVAPORATOR PAN

- Proprietary electrical unit to evaporate condensate waste (not supplied by cossiga)
- Will require power source


## ■ Drainage Options

**COSSIGA**

For further information, contact us on **T** +649 580 8471 **F** +649 580 2514 **E** info@cossiga.com  
To download C.A.D. blocks please visit [www.cossiga.com](http://www.cossiga.com)


# COSSIGA AIR FLOW USAGE GIUDE

## USAGE GUIDE LINES

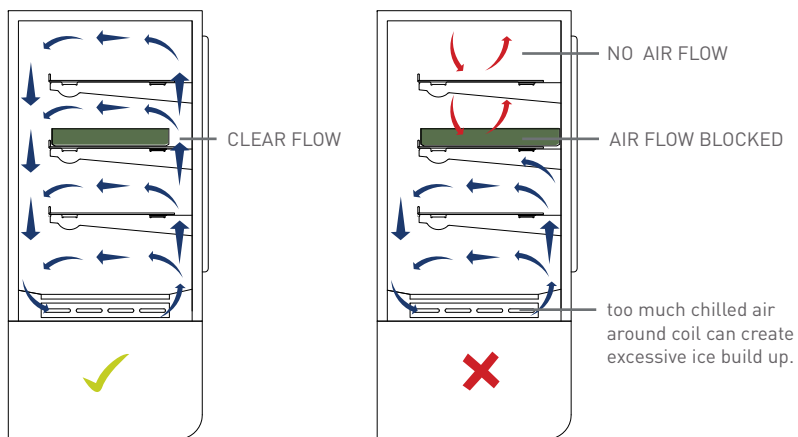

CORRECT AIRFLOW.

INCORRECT AIRFLOW.

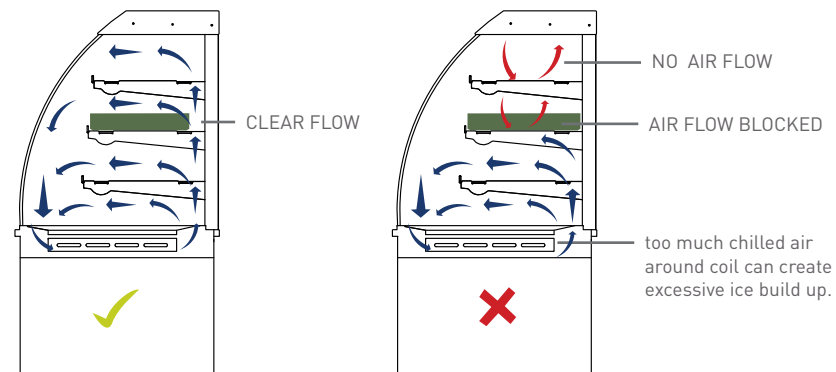

CORRECT AIRFLOW.

INCORRECT AIRFLOW.

### Internal Air Flow Requirements


**CORRECT AIRFLOW** ✓  
for both hot and cold units.

Vents are not blocked at base and ensure trays or plates are not blocking airflow at the rear of the unit.

**INCORRECT AIRFLOW** ✗  
for both hot and cold units.

Blocked airflow disturbs correct air movement and creates uneven temperatures inside unit.

Ensure bottom vents are not blocked by plates or product.  
**Blocked air flow will retard operation on both HOT and COLD unit.**

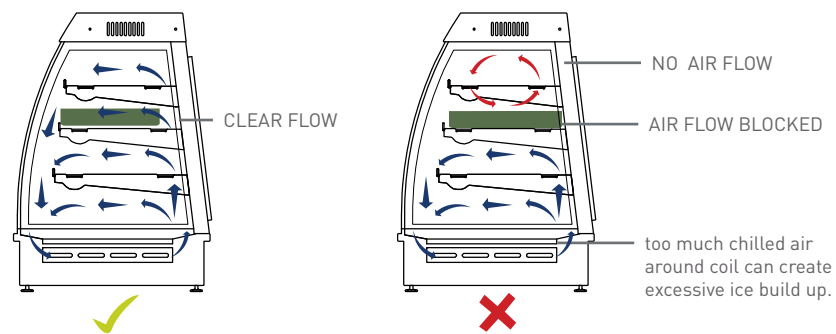

CORRECT AIRFLOW.

INCORRECT AIRFLOW.